

2 START

SWITCH SCROOSER ON + APPLY TAG



Hold start button for 2 seconds, then unlock with RFID tag.
The headlight remains **on** while driving.

SET DRIVE MODE WITH SELECT BUTTON



Impulse drive available

Hand Mode

reccomended, only handgas

Comfort Mode

balances speed
& range

Eco Mode

improves range

Sport Mode

impulse drive

ACCELERATION

Turn the throttle grip right into
your direction.



BRAKE



Backlight LEDs light-up when brakes are applied.

CONTACT

Customer Support

Phone: +49 30 2218367-900

Email: contact@scrooser.com

User Manual

detailed information is available
to download on scrooser.com/en/downloads/



QUICK STARTER GUIDE

25

Speed
in km/h

45

Range
in km*

4

Charging
in h

Innovative Features



Made in Germany



Impulse Drive



Self Balanced



Iconic Design



Street Legal



Portable Battery



Low Maintenance



Embedded Technology



SCROOSER

THE UNIQUE
ELECTRIC RIDING
EXPERIENCE.

1 SETTINGS

INTRODUCTION

With the Quick Starter Guide we introduce you to the main functions of your SCROOSER.



ERGONOMIC HANDLEBAR ADJUSTMENT

If necessary loosen only the two screws at the front with an INBUS key, size 6. For safety, check all screws after adjustment.



CHARGE THE BATTERY

Check battery status every time you use the vehicle by pressing the button. It falls into sleep mode after 24 hours to improve battery life.



3 DRIVING

RIDING EXPERIENCE

Special riding experience with Self Balancing. Creates sheer fun of driving as you steer using your bodyweight as if carving or surfing.



IMPULSE DRIVE



Impulse Drive (Modi C-E-S) enables a 3-step acceleration without handgas from 7-11-25 km/h with cruise control. Take care while using Impulse Drive - it can accelerate when passing bumps or going downhill.

LUGGAGE ATTACHMENT



Sufficient storage space with the glove box and the transport hook for a bag. In this way, you arrive relaxed at your destination.



4 PARKING

PARK & SECURE



To park, set your SCROOSER on the stand and secure it with a lock.

REGULATIONS

Street Legal

The SCROOSER is in the EU for driving on the roads authorized. An insurance license plate („moped“) is required.

Helmet Requirements

For the 25 km/h version, wearing a helmet is mandatory in the EU. For the 20 km/h version it is not required in Germany. For safety, we suggest always wearing a helmet while riding. But regulations might differ across countries, so please check local regulations for clarification.